




### EPSON™ stylus photo 960 (or 950) settings

no modification needed to print Rippedsheets 101102


(pictures may vary depending on the driver settings)

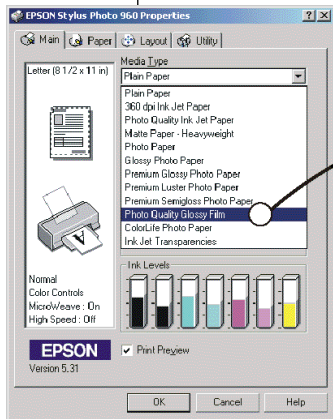


1 Change **Media Type** to **Photo Quality Glossy Film**.



2 Under **Mode**, click on **Custom**, then **Advanced**.

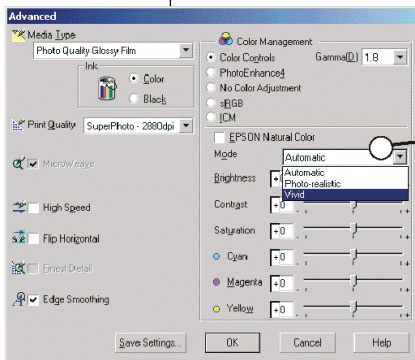

3 Under **Mode**, change to either:  
- **Vivid** when printing bright colors  
or - **Photo-realistic** when printing everything else.

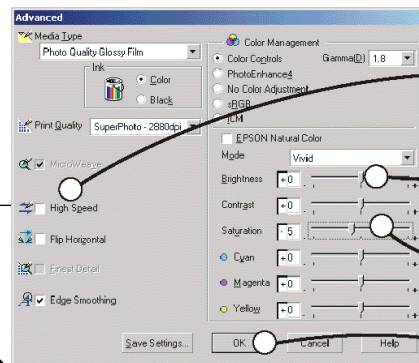


4 Deselect the **High Speed** box.

**Brightness** can be changed if desired.

Change the **Saturation** to **-5**.  
If ink appears to puddle after printing, decrease the saturation.

Click on **OK**.

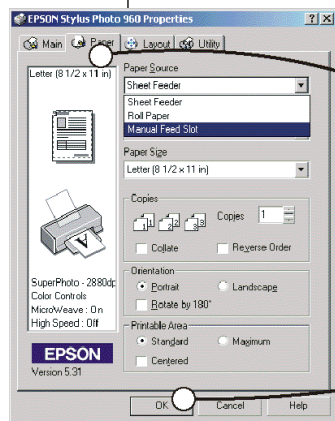

5 Click on the **Paper** tab, and change the **Paper Source** to **Manual Feed Slot**. If needed, change the **Paper Size**.

Click on **OK**, and you are ready to print.

To achieve the best possible prints, ALWAYS leave unprinted Rippedsheets 101102 sheets in the black pouch until they are ready to be loaded into the printer.